

# *Sunbeam* **ZUMBO**

**LIMITED EDITION**

Stick Mixer  
Instruction Booklet



# Contents

Sunbeam's Safety Precautions	1
Features of your Zumbo Limited Edition StickMaster®	2
Using your StickMaster®	5
Using your Whisk	6
Using your MashMaster	7
Using your Processing Bowl	8
Care & Cleaning	11

## Important instructions – retain for future use.

تأكد من تفهم احتياطات السلامة المذكورة اعلاه

請務必理解上述的安全預防措施。

Assurez-vous que les précautions ci-dessus relatives à la sécurité sont bien comprises

Versichern Sie sich, dass die obenstehenden Sicherheitsmaßnahmen Verstanden werden

Βεβαιώνετε πως οι παραπάνω προφυλάξεις ασφαλείας γίνονται κατανοητές

Pastikan bahwa tindakan-tindakan keselamatan seperti di atas dimengerti anda

Accertatevi che le suddette norme di sicurezza siano comprese a dovere

上記の注意事項をよくお読みになり、安全を御確認ください

Уверете се дека погоре споменатите мерки на претпазливост се добро разбрани

Asegúrese de que las precauciones de seguridad precedentes sean bien comprendidas

کاری بکنید کہ احتیاطهای بالا حتماً درک بشوند

ต้องแน่ใจว่า ข้อควรระวังเรื่องความปลอดภัยข้างต้น เป็นที่เข้าใจกันดี

Yukarda belirtilen güvenlik önlemlerinin anlaşıldığından emin olunuz

Xin kiểm chắc rằng những biện pháp làm an toàn kể trên được hiểu rõ

# Sunbeam's Safety Precautions

## SAFETY PRECAUTIONS FOR YOUR SUNBEAM STICKMASTER.

- Do not handle appliance with wet hands.
- Avoid contact with moving parts.
- Do not touch the blade while it is operating, as it is very sharp. After the appliance has been switched off the blade will continue to rotate a moment longer.
- Turn the power off and disconnect from supply before changing accessories or approaching parts that move in use.
- Do not use the appliance with hot liquids, as there is a risk of burns due to splashing. Allow hot liquids to be cool enough to touch.
- Hold the stick mixer firmly and up right while using it.
- Care should be taken when handling sharp cutting blades, emptying the bowl and during cleaning.
- Injury may occur if the stick mixer is not used as intended.
- Do not operate the appliance without a workload.
- When using extremely heavy loads, the appliance should not be operated for more than 4 seconds. This does not apply to the recipes detailed in this booklet.
- Never insert metal or other utensils, such as knives or forks, into the inside of the blade system while the appliance is operating.
- Do not allow children to use the blender without supervision

**Sunbeam is very safety conscious when designing and manufacturing consumer products, but it is essential that the product user also exercise care when using an electrical appliance. Listed below are precautions which are essential for the safe use of an electrical appliance:**

- Read carefully and save all the instructions provided with an appliance.
- Always turn the power off at the power outlet before you insert or remove a plug. Remove by grasping the plug - do not pull on the cord.
- Turn the power off and remove the plug when the appliance unattended, before assembling, disassembling or cleaning.
- Do not use your appliance with an extension cord unless this cord has been checked and tested by a qualified technician or service person.
- Always use your appliance from a power outlet of the voltage (A.C. only) marked on the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The temperature of accessible surfaces may be high when the appliance is operating.
- Never leave an appliance unattended while in use.
- Do not use an appliance for any purpose other than its intended use.
- Do not place an appliance on or near a hot gas flame, electric element or on a heated oven.
- Do not place on top of any other appliance.
- Do not let the power cord of an appliance hang over the edge of a table or bench top or touch any hot surface.
- Do not operate any electrical appliance with a damaged cord or after the appliance has been damaged in any manner. If damage is suspected, return the appliance to the nearest Sunbeam Appointed Service Centre for examination, repair or adjustment.
- For additional protection, Sunbeam recommend the use of a residual current device (RCD) with a tripping current not exceeding 30mA in the electrical circuit supplying power to your appliances.
- Do not immerse the appliance in water or any other liquid unless recommended.
- Appliances are not intended to be operated by means of an external timer or separate remote control system.
- This appliance is intended to be used in household and similar applications such as: staff kitchen areas in shops, offices and other working environments; farm houses; by clients in hotels, motels and other residential type environments; bed and breakfast type environments.

If you have any concerns regarding the performance and use of your appliance, please visit [www.sunbeam.com.au](http://www.sunbeam.com.au) or contact the Sunbeam Consumer Service Line.

Ensure the above safety precautions are understood.

# Features of your Zumbo Limited Edition StickMaster®

## Power buttons

Preselect speed 1-9 on the large LCD screen then press the speed button (⏻).

For instant power select the (TURBO) speed setting.

## Powerful 700 watt motor

High powered 700 watt motor for the most demanding blending tasks.

 
## Patent Pending 3 x 3 blade system

Three-way horizontal blades create a horizontal slicing motion to maintain the integrity of the food by slicing and not mashing.

The unique design of the ice crushing blades create vertical crushing and are ideal for hard foods such as ice and nuts.

The combination of horizontal slicing & vertical crushing offers the ultimate in blending performance.



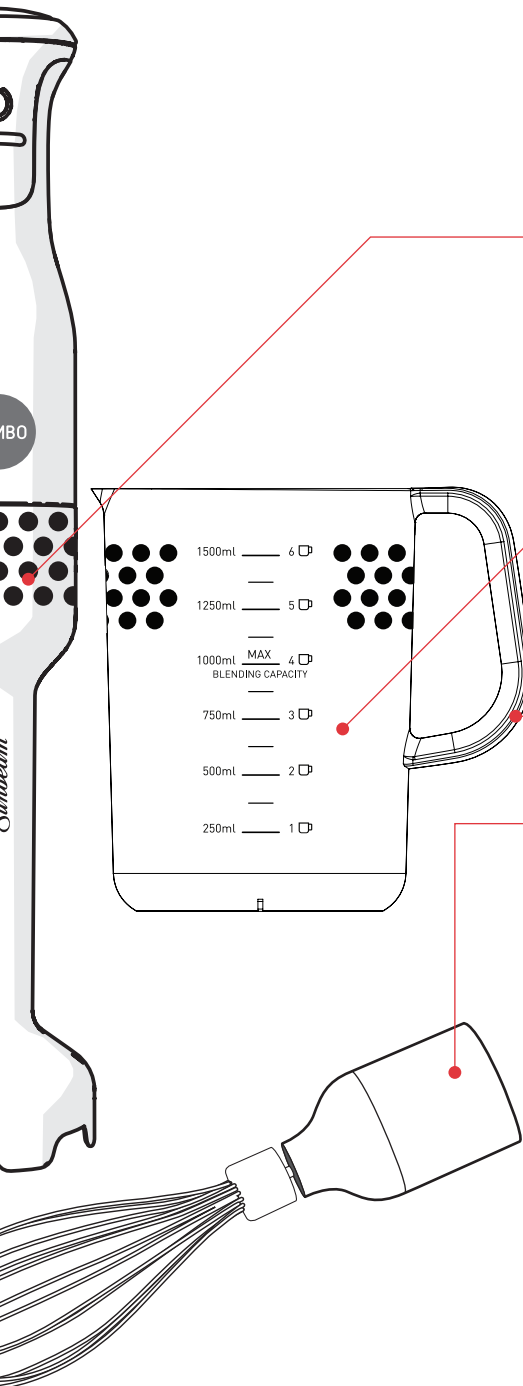

### **Detachable stainless wand**

The stainless steel wand detaches with a twist and lock design that is intuitive and easy to use.

### **Dishwasher-safe components**

The detachable shaft, chopper bowl, chopping blade, whisk attachment, beaker and non-slip mat/storage caps are dishwasher-safe for easy cleaning.

### **Large capacity beaker**

Large capacity 1.5 litre beaker is ideal for smoothies and your favourite drinks. The measurement marking are ideal for measuring out ingredients.

### **Beaker handle**

Provides maximum control of the beaker when blending.

### **Whisk attachment**

Stainless steel whisk conveniently attaches to the StickMaster®. Ideal for beating egg whites, mixing light batters or whisking cream.

## Features of your Zumbo Limited Edition StickMaster®

### Tilt Safety

Prevent splashing of liquid around your kitchen if the stick mixer is accidentally tilted. Once nearing 90 degrees, the motor will automatically turn off, stopping ingredients being splashed around or hands being in contact with the blades

### Soft Start


Prevent the initial splash of liquids often experienced when using a stick mixer, with the Soft Start feature. Soft Start slowly ramps up the speed regardless of the initial speed selected.

### Speeds 1-9 plus Turbo

Speeds 1-9 can be selected by turning the LCD dial in a clockwise manner. The selected speed will be shown on the LCD screen.

Once a speed is selected, hold in the top control button. Soft Start will be activated.

 To select Turbo setting, hold in the bottom control button.

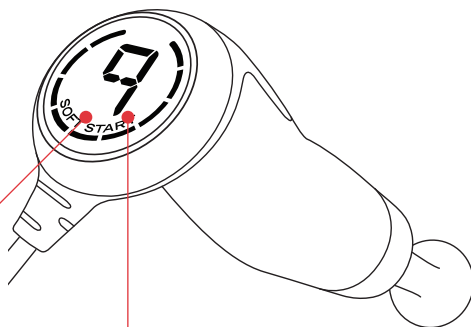

### LCD User Interface

The backlit LCD screen provides feedback and lets you know what speed you have selected, when Soft Start is active and when the Tilt safety function has been activated.

# Using your StickMaster®

It is recommended to wash your StickMaster® shaft, beaker, chopping bowl and whisk in warm soapy water with a soft cloth. Rinse and dry thoroughly.

**Important:** Before using your StickMaster® remove any packaging material and promotional labels or tags.

**Important:** Ensure that the StickMaster® is unplugged from the power outlet before assembling or removing attachments.

1. Insert the motor housing into the wand and twist the wand in a clockwise position until you hear a click. See Figure 1.

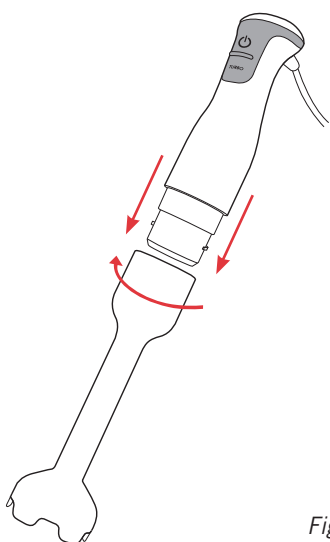 


Figure 1

2. Plug the power cord into a 230-240 volt power outlet and turn the power on.
3. Lower the stick mixer into food and select from speed 1 through to 9 and depress the power button (⏻) or setting (TURBO) at the top of the motor housing.

**Note:** All stick mixers are designed to operate only when the power buttons remain depressed.

**Note:** The power button (⏻) should be released when selecting the turbo speed button (TURBO).

4. To stop the stick mixer, take your finger off the power button (⏻) or the turbo speed button (TURBO).
5. To detach the wand, twist the shaft in an anti clockwise position until the wand unscrews from the motor housing. See Figure 2.

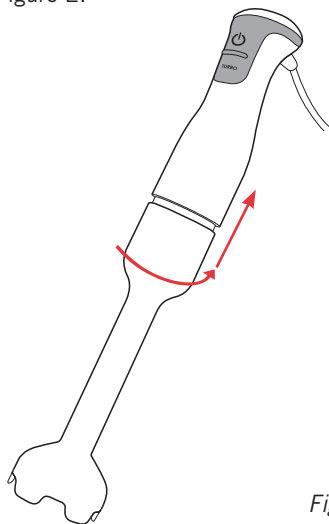 


Figure 2

# Using your StickMaster whisk

## Using the whisk attachment

1. Insert the whisk attachment onto the motor base and rotate in a clockwise position until the two pieces are locked together. See Figure 5.

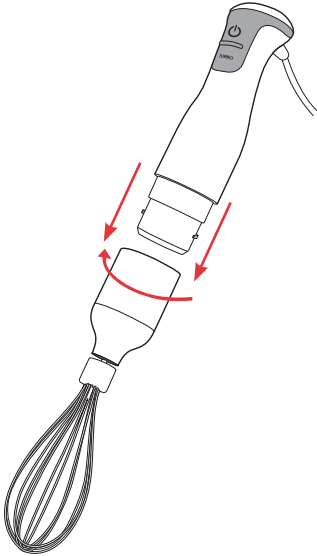 


Figure 5

2. Plug the power cord into a 230-240 volt power outlet and turn the power on.
3. Holding the stick mixer, lower the whisk into food and depress the power button at the top of the motor housing. Select from speed 1 through to 9 and depress the power button (⏻) or setting (TURBO) at the top of the motor housing.

**Note:** All stick mixers are designed to operate only whilst the power buttons remain depressed.

**Note:** The power button (⏻) should be released when selecting the turbo speed button (TURBO).

5. To stop the StickMaster®, take your finger off the power button or the turbo speed button.
6. To detach the whisk attachment, rotate the attachment in an anti clockwise position until the attachment unscrews from the motor base.

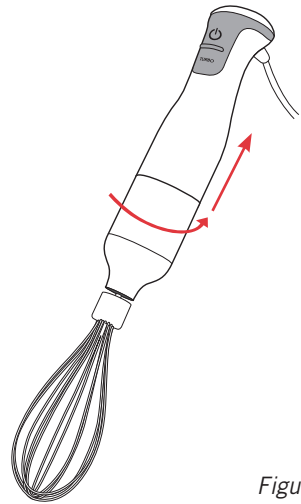 


Figure 6



# Using your MashMaster

It is recommended to wash the wand of your MashMaster in warm soapy water with a soft cloth. Rinse and dry thoroughly.

The top section of the mashing wand that includes the gearbox, should not be immersed in water and should be cleaned with a soft damp cloth.

**Important:** Before using your MashMaster remove any packaging material and promotional labels or tags.

**Important:** Ensure that the MashMaster is unplugged from the power outlet before assembling or removing attachments.

1. Insert the motor housing into the wand and twist the wand in a clockwise position until you hear a click. See Figure 7.

The gear box is attached between the motor housing and the mashing wand.

2. Plug the power cord into a 230-240 volt power outlet and turn the power on.

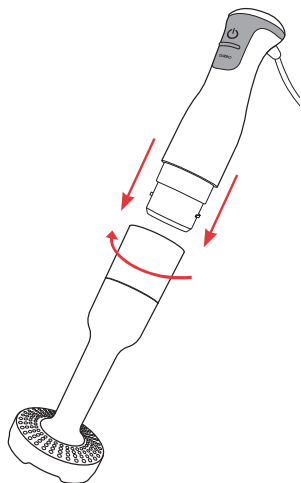 


Figure 7

3. Lower the stick mixer into food and select from speed 1 through to 9 (on StickMaster® Platinum model) and depress the power button (⏻) or setting (TURBO) at the top of the motor housing.

**Note:** All stick mixers are designed to operate only when the power buttons remain depressed.

4. To stop the stick mixer, take your finger off the power or turbo speed button.

5. To detach the wand, twist the shaft in an anti clockwise position until the wand unscrews from the motor housing. See Figure 8.

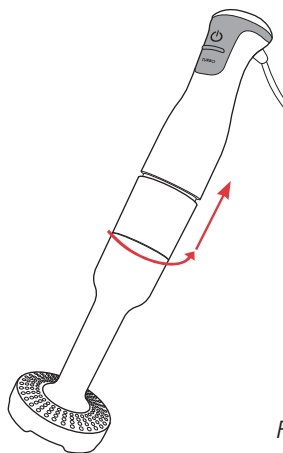 


Figure 8

# Using your processing bowl

It is recommended to wash the processing bowl in warm soapy water with a soft cloth. Rinse and dry thoroughly.

**Important:** Take care when washing the blades as they are sharp.

**Important:** Do not immerse the lid in water

**Important:** Before using your processing bowl remove any packaging material and promotional labels or tags.

**Important:** Ensure that the StickMaster is unplugged from the power outlet before assembling or removing attachments.

1. Attach lid to processing bowl.
2. Insert the motor housing into the processing bowl lid and twist the wand in a clockwise position until you hear a click. See Figure 9.

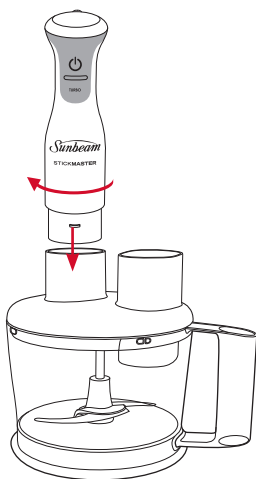 


Figure 9

3. Plug the power cord into a 230-240 volt power outlet and turn the power on.
4. Select from speed 1 through to 9 (on StickMaster® Platinum model) and depress the power button (⏻) or 'turbo speed button' (TURBO) at the top of the motor housing.

**Note:** All stick mixers are designed to operate only when the power buttons remain depressed.

5. To stop the stick mixer, take your finger off the power or turbo speed button.
6. To detach the motor body, twist the shaft in an anti clockwise position until the motor body unscrews from the processing bowl. See Figure 10.

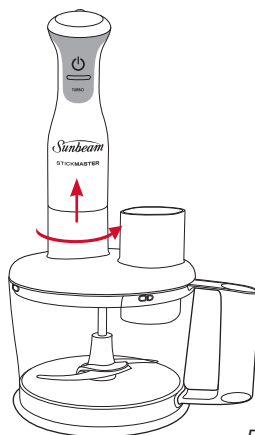 


Figure 10

## Using your processing bowl continued

### Using the processing bowl with the chopping blade

1. Place the processing bowl on the non-slip mat, ensuring the surface is clean and level.
2. Fit the stainless steel chopping blade into the processing bowl.
3. Place food into the processing bowl.
4. Attach the lid onto the processing bowl and rotate the lid in a clockwise direction until it locks into position.
5. Insert the motor housing into the processing bowl lid and twist the wand in a clockwise position until you hear a click. See Figure 11.
6. Plug the power cord into a 230-240 volt power outlet and turn the power on.

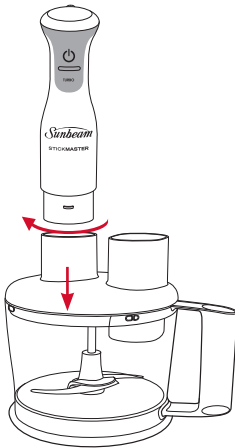 


Figure 11

7. Hold the bowl with one hand while operating the power button with the other. Select from speed 1 through to 9 (on StickMaster® Platinum model) and depress the power button (⏻) or turbo speed button (TURBO) at the top of the motor housing.

**Note:** All stick blenders are designed to operate only whilst the power buttons remain depressed.

8. For an extra boost of power during operation, the turbo speed button (TURBO) may be depressed.

**Note:** The power button (⏻) should be released when selecting the turbo speed button (TURBO).

9. To stop the stick blender, take your finger off the power button or turbo speed button.
10. To detach the motor body, twist the shaft in an anti clockwise position until the motor body unscrews from the processing bowl. See Figure 12.

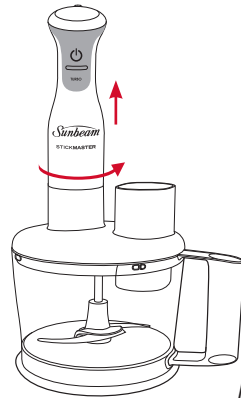 


Figure 12

## Using your processing bowl continued

### Using the processing bowl attachment with the slicing/shredding disc

1. Place the processing bowl on the non-slip mat, ensuring the surface is clean and level.
2. Place food into the processing bowl.
3. Fit the shredding/slicing disc with the spindle into the processing bowl.
4. Attach the lid onto the processing bowl and rotate the lid in a clockwise direction until it locks into position.
5. Insert the motor housing into the processing bowl lid and twist the wand in a clockwise position until you hear a click. See Figure 13.
6. Plug the power cord into a 230-240 volt power outlet and turn the power on.

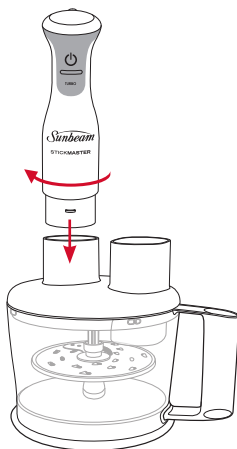 




Figure 13

7. Remove the food pusher and place ingredients into the feed tube. Using the food pusher guide food down the feed tube evenly, while operating the power button with the other hand.

8. Select from speed 1 through to 9 (on StickMaster® Platinum model) and depress the power button (  ) or turbo speed button (**TURBO**) at the top of the motor housing.

**Note:** All stick blenders are designed to operate only whilst the power buttons remain depressed.

**Note:** The power button (  ) should be released when selecting the turbo speed button (**TURBO**).

9. To stop the stick blender, take your finger off the power button or turbo speed button.
10. To detach the motor body, twist the shaft in an anti clockwise position until the motor body unscrews from the processing bowl. See Figure 14.

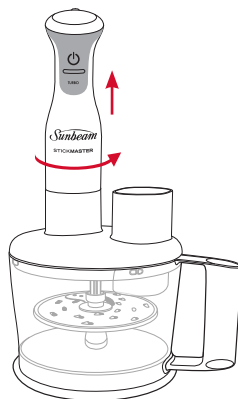 


Figure 14

**Note:** Discolouring of the interior of the chute can occur overtime, with heavily coloured foods such as carrots or berries.

# Care and Cleaning

## After each use it is recommended

1. Always remove the power cord from the power outlet before cleaning and remove the detachable wand of the stick mixer.


**Note:** DO NOT immerse, that is, soak the detachable shaft of the StickMaster® in water because overtime the lubrication on the bearings can wash away.

2. Wash the detachable wand under running water, without use of abrasive detergents.
3. When you have finished cleaning the detachable wand of the StickMaster®, place it upright so that any water which may have got in, can drain out.
4. Attachments including the beaker, beaker mat, chopper bowl and chopping blade can be washed in hot soapy water.
5. Dry thoroughly.

**Important:** Blades are extremely sharp, handle with care.

**Note:** Should the stainless steel chopper blade dull from extensive use, sharpening is recommended at your local sharpening shop to ensure consistent results.

## For a quick wash up

Between processing tasks, hold the StickMaster® in the beaker half filled with water and depress the power button (  ) for a few seconds.

## Dishwasher Use

All plastic components deteriorate through prolonged dishwasher use.

However, parts of your StickMaster® are tolerant to dishwasher use. These include the shaft, beaker, chopper bowl, chopper blade and whisk.

**Note:** Place only on the top rack of the dishwasher.

**Important:** Motor housing is not dishwasher safe.

## Motor Housing

Clean the motor housing with a damp cloth.

**Important:** Ensure that the motor housing is not immersed in water or any other liquid.

# Notes

# Notes

# 12 Month Replacement Guarantee

This Sunbeam product is covered by a 12 month replacement or repair warranty, which is in addition to your rights under the Australian Consumer Law (if your product was purchased in Australia) or New Zealand Consumer Guarantees Act (if your product was purchased in New Zealand).

Upon receipt of your claim, Sunbeam will seek to resolve your difficulties or, if the product is defective, advise you on how to obtain a replacement or refund.

To assist us in managing warranty claims, we recommend you register your product as soon as practicable after purchase by creating a MySunbeam account on our website and uploading a copy of your original receipt.

In order to make a claim under our warranty, you must have the original proof of purchase documentation for the product and present it when requested (if not already uploaded to our website).

Should your product develop any defect within 12 months of purchase because of faulty materials or workmanship, we will replace or repair it, at our discretion, free of charge. A product presented for repair may be replaced by a refurbished product of the same type rather than being repaired. Refurbished parts may be used to repair the product.

Our replacement or repair warranty only applies where a defect arises as a result of faulty material or workmanship during the warranty period. Your warranty does not cover misuse or negligent handling (including damage caused by failing to use the product in accordance with this instruction booklet), accidental damage, or normal wear and tear.

Your warranty does not:

- cover freight or any other costs incurred in making a claim, consumable items, accessories that by their nature and limited lifespan require periodic renewal (such as filters and seals) or any consequential loss or damage; or
- cover damage caused by:
  - power surges, power dips, voltage supply problems, or use of the product on incorrect voltage;

- servicing or modification of the product other than by Sunbeam or an authorised Sunbeam service centre;
- use of the product with other accessories, attachments, product supplies, parts or devices that do not conform to Sunbeam specifications; or
- exposure of the product to abnormally corrosive conditions; or

- extend beyond 3 months if the product is used in commercial, industrial, educational or rental applications.

The benefits given to you by our warranty are in addition to other rights and remedies under law in relation to the product.

In Australia our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Our goods also come with guarantees that cannot be excluded under the New Zealand Consumer Guarantees Act.

If your warranty claim is not accepted, we will inform you and if requested to do so by you, repair the product provided you pay the usual charges for such repair. You will also be responsible for all freight and other costs.

Should your product require repair or service after the warranty period, contact your nearest Sunbeam service centre. For a complete list of Sunbeam's service centres, visit our website or call our customer service line for advice on 1300 881 861 in Australia, or 0800 786 232 in New Zealand.

Should you experience any difficulties with your product during the warranty period, please contact our customer service line for advice on 1300 881 861 in Australia, or 0800 786 232 in New Zealand.

---

## Australia

[www.sunbeam.com.au](http://www.sunbeam.com.au)  
1300 881 861  
Units 5 & 6,  
13 Lord Street,  
Botany NSW 2019  
Australia

## New Zealand

[www.sunbeam.co.nz](http://www.sunbeam.co.nz)  
0800 786 232  
Level 6, Building 5,  
Central Park,  
660-670 Great South Road,  
Greenlane, Auckland  
New Zealand

---





## Need help with your appliance?

Contact our customer service team or visit our website for information and tips on getting the most from your appliance.

### In Australia

Visit [www.sunbeam.com.au](http://www.sunbeam.com.au)

Or call 1300 881 861

### In New Zealand

Visit [www.sunbeam.co.nz](http://www.sunbeam.co.nz)

Or call 0800 786 232

*Sunbeam* is a registered trademark.

StickMaster® is a registered trademark of Sunbeam Corporation.

Made in China. Designed and engineered in Australia.  
Due to minor changes in design or otherwise, the product may differ from the one shown in this leaflet.

© Copyright, Sunbeam Corporation Limited 2016.

ABN 45 000 006 771

Units 5 & 6, 13 Lord Street  
Botany NSW 2019 Australia

Level 6, Building 5, Central Park  
660-670 Great South Road  
Greenlane, Auckland  
New Zealand

Sunbeam Corporation Pty Ltd, Acn 000 006 771

GCDS-SUN46159-SL